



myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY BDP-S470. You'll find the answers to all your questions on the SONY BDP-S470 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY BDP-S470
User guide SONY BDP-S470
Operating instructions SONY BDP-S470
Instructions for use SONY BDP-S470
Instruction manual SONY BDP-S470

SONY

4-184-341-11(1)

The software of this player may be updated in the future. To find out details on any available updates, please visit: <http://www.sony.com/blu-raysupport/>



AVCHD™

HDMI



BD-LIVE™



<http://www.sony.net/>

Printed on 70% or more recycled paper using VOC (Volatile Organic Compound)-free vegetable oil based ink.

4-184-341-11(1)



Printed in Malaysia

© 2010 Sony Corporation

Operating Instructions

Blu-ray Disc™ / DVD Player
BDP-S470



[Your user manual](#)
[SONY BDP-S470](#)

Manual abstract:

A disc that has a nonstandard shape (e.g., card, heart). A disc with a label or sticker on it. A disc that has cellophane tape or sticker adhesive on it. · Do not resurface the playing side of a disc to remove surface scratches. · Do not expose the disc to direct sunlight or heat sources such as hot air ducts, or leave it in a car parked in direct sunlight as the temperature may rise considerably inside the car. · After playing, store the disc in its case. · Clean the disc with a cleaning cloth. Wipe the disc from the center out.

· Do not use solvents such as benzene, thinner, commercially available disc/ lens cleaners, or anti-static spray intended for vinyl LPs. · If you have printed the disc's label, dry the label before playing. 3 Precautions The power requirements and power consumption of this player are indicated on the back of the player. Check that the player's operating voltage is identical with your local power supply. Power requirements and power consumption m · Take out any discs when you move the player.

If you don't, the disc may be damaged. · Disconnect the AC power cord and all other cables from the player when you move the player. On adjusting volume Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, your ears and the speakers may be damaged when a peak level section is played. On power sources · The player is not disconnected from the AC power source as long as it is connected to the wall outlet, even if the player itself has been turned off.

· Disconnect the player from the wall outlet if you are not going to use the player for a long time. To disconnect the AC power cord, grasp the plug itself; never pull the cord. · Observe following points to prevent the AC power cord being damaged. Do not use the AC power cord if it is damaged, as doing so may result in an electric shock or fire. Do not pinch the AC power cord between the player and wall, shelf, etc. Do not put anything heavy on the AC power cord or pull on the AC power cord itself. On cleaning Clean the cabinet, panel, and controls with a soft cloth. Do not use any type of abrasive pad, scouring powder or solvent such as alcohol or benzene. On cleaning discs, disc/ lens cleaners Do not use cleaning discs or disc/lens cleaners (including wet or spray types). These may cause the apparatus to malfunction.

On placement · Place the player in a location with adequate ventilation to prevent heat build-up in the player. · Do not place the player on a soft surface such as a rug that might block the ventilation holes. · Do not install this player in a confined space, such as a bookshelf or similar unit. · Do not place the player in a location near heat sources, or in a place subject to direct sunlight, excessive dust, or mechanical shock. · Do not place the player outdoors, in vehicles, on ships, or on other vessels. · If the player is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lenses inside the player. Should this occur, the player may not operate properly. In this case, remove the disc and leave the player turned on for about half an hour until the moisture evaporates. · Do not install the player in an inclined position. It is designed to be operated in a horizontal position only.

· Do not place heavy or unstable objects on the player. · Do not place any objects other than discs on the disc tray. Doing so may cause damage to the player or the object. On replacement of parts In the events that this player is repaired, repaired parts may be collected for reuse or recycling purposes. For the model supplied with the AC plug adaptor If the AC plug of your unit does not fit into the wall outlet, attach the supplied AC plug adaptor.

4 On connecting to the HDMI OUT jack Observe the following as improper handling may damage the HDMI OUT jack and the connector. · Carefully align the HDMI OUT jack on the rear of the player and the HDMI connector by checking their shapes. Make sure the connector is not upside down or tilted. IMPORTANT NOTICE Caution: This player is capable of holding a still video image or on-screen display image on your television screen indefinitely..



[Your user manual](#)
[SONY BDP-S470](#)